


## Cascade Impedance Standard SubstrateMap

> P/N: 138-356

Pitch: **50 μm - 75 μm**Configuration: **GSG** 

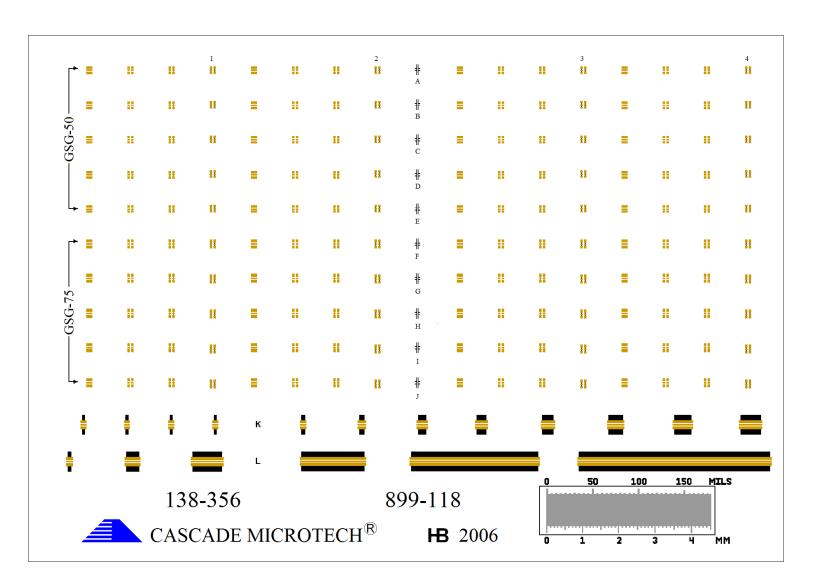


				Verification Lines			
			Note: Ensure the	ID	ps	um	
			bias supply is turned off during	K1	0.5	135	
			calibration. Applying	K2	0.5	135	│ <b>┤</b> ┡ │
			bias to the probe	K3	0.5	135	│ <b>┤</b> ┣ │
			during calibration	K4	0.5	135	
			could cause the resistance of the load	K5	1.1	215	→ ←
			to change.	K6	1.4	250	65 um
			_	<b>K</b> 7	1.9	315	
Thru	Open	Load		K8	2.3	365	Alignment Marks
				K9	2.7	420	
Thru delay: 0.5 ps				K10	3.2	485	
				K11	3.8	570	
			DC accuracy:	K12	4.5	655	
	<b>,,</b> ,,		+/- 0.3 %				
Impedance: 50 Ohm	52 52	🚆 🖫		ID	ps	um	
(Nominal)				L1	1	200	
Note: Verification			Note: For optimum	L2	3	450	Note: ISS must be
line lengths are			calibration accuracy only the Red -	L3	7	900	mounted on absorber material (such as ISS
signal conductor			marked load	L4	14	1800	Holder PN 116-344)
edge-to-edge dimension	Short	Precision	standards should be	L5	27	3500	during calibration.
unicusion.		50 Ohm Load	used.	L6	40	5250	

All of the above specifications are based on an overtravel (downward movement of probe after initial touchdown on the substrate) of 25-50 µm for Infinity style probes. This amount of overtravel can be set before calibration on the Impedance Standard Substrate (ISS) using the alignment marks (allows precise setting of probe separation and overtravel). Figure 1 shows that initial contact with the edge of the probe tips should be made at reference plane X. The desired overtravel and thus skate (forward movement of probe tips after initial contact with substrate) is then achieved by adjusting the Z height on the positioner to move the edge of the probe tips to reference plane Y. This can also be seen from the photographic images shown in Figure 2.



Figure 1: Alignment

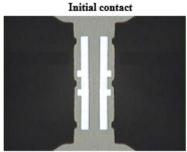

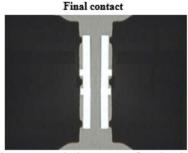


Figure 2: Images showing correct alignment and placement of probe tips of Infinity style probes.

**Calibration Coefficients** are dependent on the probe tip configuration, placement on a standard, and the standard configurations. This leads to unique calibration coefficients for a unique pair of probe and ISS. Therefore, the calibration coefficients are supplied with the probe not with the ISS.

© Copyright 2020 FormFactor, Inc. All rights reserved. FormFactor and the FormFactor logo are trademarks of FormFactor, Inc. All other trademarks are the property of their respective owners. All information is subject to change without notice.

Corporate Headquarters 7005 Southfront Road Livermore, CA 94551 Phone: 925-290-4000 www.formfactor.com

Document PN: 138-369 rev B